


◆ Characteristic / 特點：

- Small size, 10 mm thickness, can be mounted in a small space. Several amplifiers can be mounted side by side.
/ 體積薄，厚度只有10mm，使用空間小，多個併排安裝。
- 20-Turns Sensitivity Adjuster. The optimum sensitivity can be set easily.
/ 多迴轉(20 TURNS)靈敏度調整。
- Long (Long distance) : 8~11cm/ Middle (Middle distance) : 4~6cm selectable.
/ 可選擇Long/ Middle檢測距離。



• FZ1-KP2

**L.on/D.on Switch**

Easy selection to switch the output operation as either Light-ON or Dark-ON.

**Sensing Distance Switch**


Long, Middle selectable.

**20-turn Sensitivity Adjuster**

Users can adjust the sensitivity more optimum according to different objects.

**Fiber Lock Lever**

Special design for fiber cables fixed. Simple operation and easy maintenance.

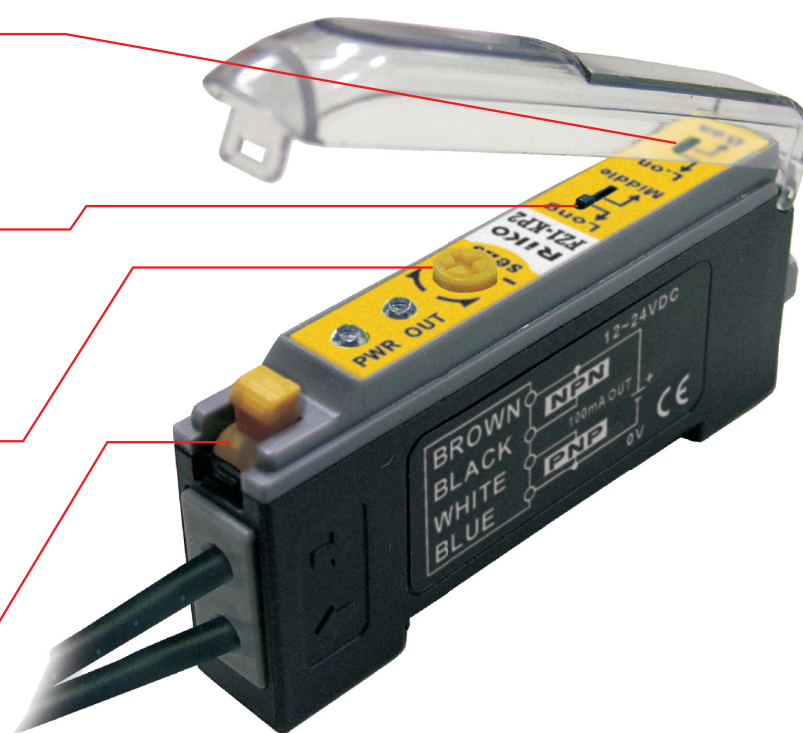


◆ Specifications / 規格表：



Model / 型號	NPN L.on / D.on	FZ1-N	FZ1-ND	FZ1-NI
	PNP L.on / D.on	FZ1-P	FZ1-PD	FZ1-PI
	NPN L.on / D.on	FZ1-KP2	FZ1-KP2B	—
	PNP D.on / L.on			
Emitting light / 發光源	Red LED 680 nm			Infrared LED 850nm
Operating voltage / 工作電壓	DC12~24V $\pm$ 5%			
Current Consumption / 消耗電流	40mA Max.			
Load current / 負載電流	100mA Max.at DC24V			
Protection circuit / 保護電路	Reversed polarity protection, over-current protection			
Response time / 反應時間	on 1 ms, off 1ms			
Indicators/指示燈	Output indicator : Red LED, Power indicator : Green LED			
Sensitivity adjusrment/靈敏度功能	20 turns trimmer			
Insulation resistance / 隔離阻抗	20M Ω min. (DC500V)			
Voltage withstandabiligy / 絕緣耐壓	AC500V 60Hz for 60 Sec.			
Operating temperature/工作溫度	- 10 $^{\circ}$ C ~ + 60 $^{\circ}$ C			
Ambient humidity / 工作溼度	35% ~ 85% RH			
Protection degree / 防水等級	IP64			
Material / 外觀材質	ABS			
Wiring method / 出線方式	N/P : Pre-wired $\varnothing$ 4.2 x 2 M / 3-wires KP2 : Pre-wired $\varnothing$ 4.2 x 2 M / 4-wires		M8 pigtailed type / M8 接頭 15cm電線式	Pre-wired $\varnothing$ 4.2 x 2 M / 3-wires
Weight / 重量	Approx. 65g		Approx. 35g	Approx. 65g

◆ Dimensions / 外型尺寸圖 : (unit:mm)

• FZ1-N/P

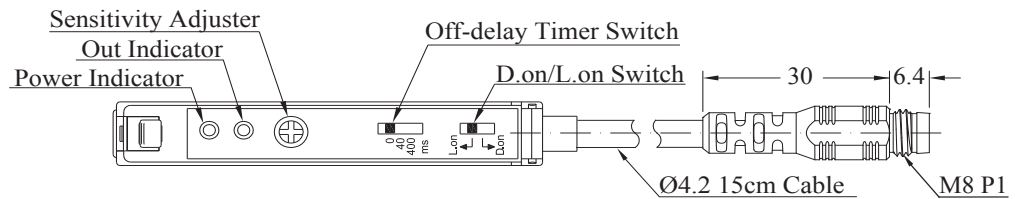


• FZ1-KP2

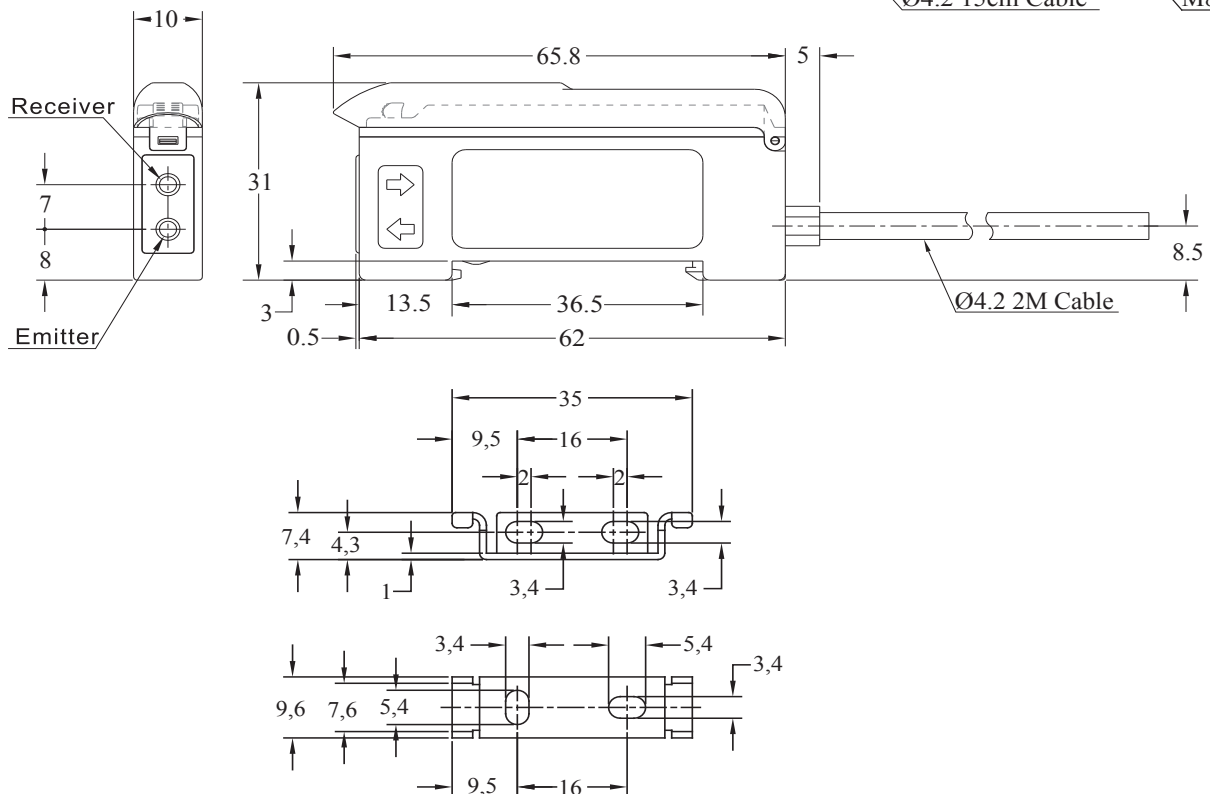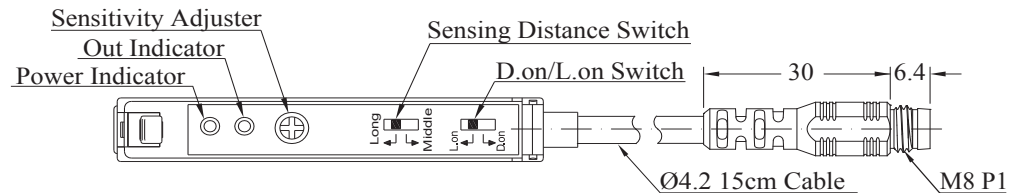


◆ Wiring diagrams / 接線圖 :


NPN Output

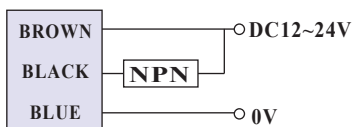


D Type Output

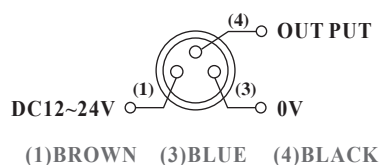


KP2 Output

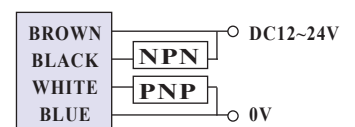


PNP Output

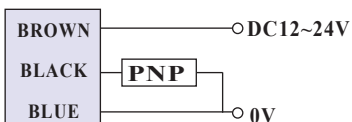

KP2B Output

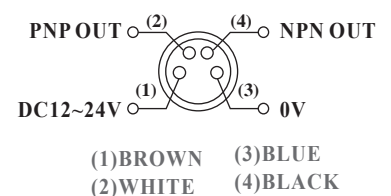


◆ FZ1-N/P Operation timing chart :

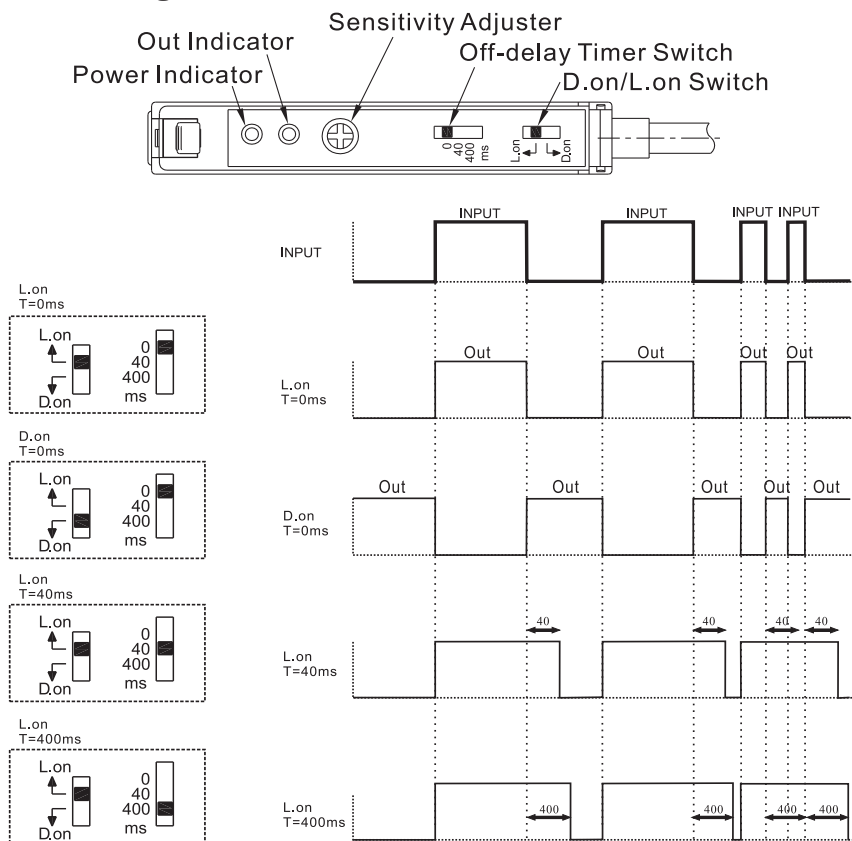


◆ Fiber amplifier mounting/detaching operation :

1. Mounting / 安裝

- (1) To mount each amplifier to the attached mounting bracket or DIN rail in sequence.

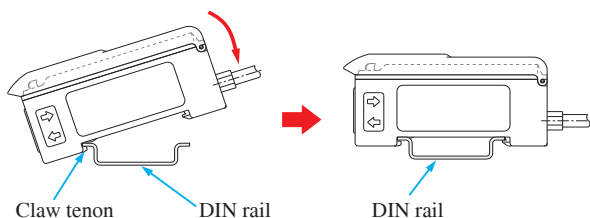

- (2) To connect two amplifiers close together by sliding the amplifier bodies.

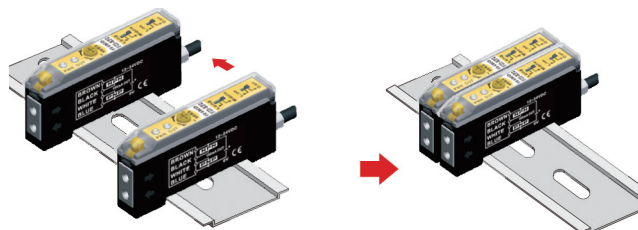

2. Detaching / 卸下

- *To detach the amplifiers in sequence by sliding the amplifier bodies. Don't detach two amplifiers at a time.




Be sure to switch off the power supply when mounting or detaching the amplifier.

◆ Fiber cables fixing operation :


1. Insert the fiber cables / 插入光纖

- *Open the protective hood and tilt the fiber lock lever to release the lock condition. Referring to the side seal of insertion position, fully insert the fiber cables into the mounting holes until the limit. Pull the fiber lock lever back to lock the cables.

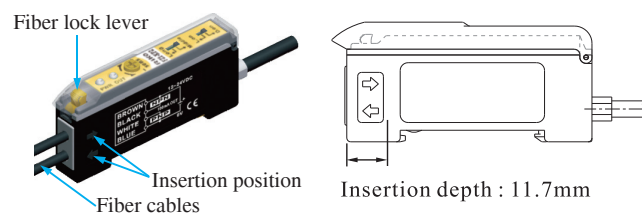

2. Pull out the fiber cables / 拔出光纖

- *Open the protective hood and tilt the fiber lock lever to release the lock condition. Pull the fiber cables straight out from the mounting holes.

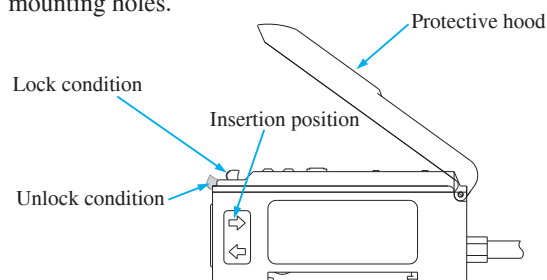

1. To protect the fiber cables from incorrect operation, be sure to tilt the fiber lock lever to release the lock condition before pulling out the fiber cables.
2. Pull up the protective hood forcefully may damage the fixing pin of the hood (not exceed 90 degrees).